




## RESIDENT USE

### USING KEYCODES AND UTILITY CODES (ACTIVE ENTRY 1 ONLY)

#### RESIDENT 6-DIGIT KEYCODES

Residents are assigned a 6-digit, personalized key-code for accessing the facility. To use the keycode assigned, the resident must first push the  key once and enter their keycode. The screen will display "Access Granted" (fig a.) and access will be allowed. If an incorrect keycode is entered, the system will inform the user of the invalid entry (fig b.) The resident can then re-enter their keycode.



\* ACCESS GRANTED \*  
Please Enter

(fig a.)




\* INVALID ENTRY \*  
Invalid 6-Digit Code

(fig b.)

**EXAMPLE - KEYCODE 002543** =  (0) (0) (2) (5) (4) (3)

#### INDIVIDUAL UTILITY CODES

All systems, no matter what the memory capacity, are equipped with 60 different Utility codes. To access the facility within the time zone set, the Utility Company must first press the  key TWICE and then enter their 4-digit code. If it is within the programmed time zone for entry, the screen will display "Access Granted" (fig c.) and access will be allowed. If, however, it is not within the time zone for entry, the display will inform the user and access will not be allowed (fig d.)



\* ACCESS GRANTED \*  
Please Enter

(fig c.)



\* ACCESS DENIED \*  
Not In Access Period

(fig d.)

**EXAMPLE - UTILITY CODE 8716** =   (8) (7) (1) (6)

## SCREEN SAVER MODE

If the Dial Code System is inactive for 15 seconds it will go into sleep mode. The screen will continue to display the scrolling message "Press Any Key" until a key is pressed. The Screen saver mode is not available while in program mode.



PRESS ANY KEY

(fig e.)